

ULTRATHIN TOUCH SLIDE RF REMOTE CONTROLLER

Model number: **R11** **R13**

Entry Series (Mono Colour & RGB)

Features

- Apply to single color, or RGB controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holde or any metal surfaces.
- White & Black available.



R11
Dimming



R13
RGB

CE RoHS  LVD RED

Technical Parameters

Input and Output

Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	<10µA
Standby time	1 year
Remote distance	30m(Barrier-free)

Environment

Operation temperature	Ta: -30 °C ~ +55 °C
-----------------------	---------------------

Safety and EMC

EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard (LVD)	EN 62368-1:2020+A11:2020
Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Package


Size (mm)	L156 x W48 x H22
Gross weight (kg)	0.075

Warranty

5 years

Mechanical Structures & Installations


All sizes in mm

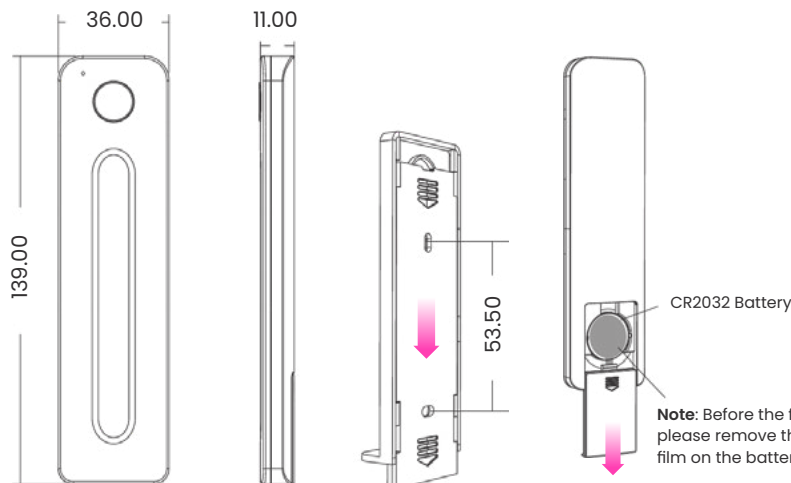

Back Holder

To fix the remote, there are three options:

1. Can be adsorbed directly onto metal surfaces.
2. Fix the remote's back holder on the wall with two screws.
3. Adhere the remote' back holder to the wall with paster.

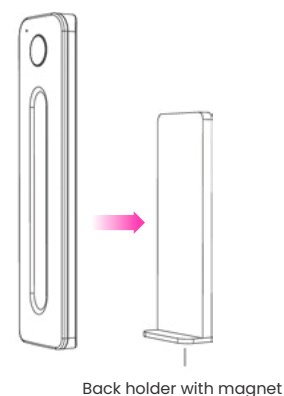

Match Remote control

End user can choose the suitable match/delete ways. Two options are offered for selection:

1. Use the controllers match key

To Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

To Delete:

Press and hold match key for 5s to delete all match, the LED indicator fast flash a few times means all matched remotes were deleted.

2. Use Power Restart



To Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

To Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function

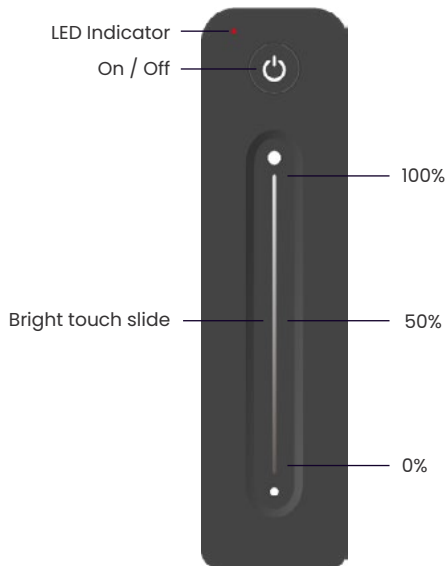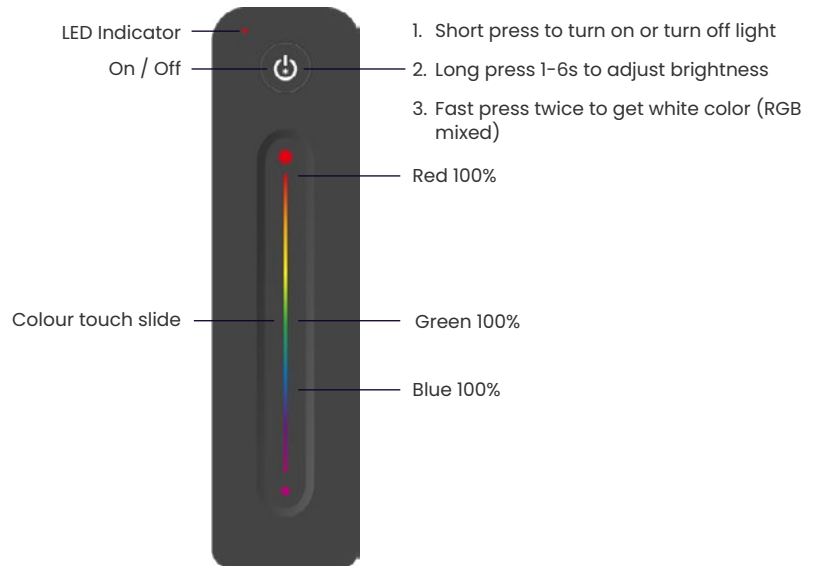R11
1 Zone Dimming Remote

R13
1 zone RGB remote


Safety Information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
3. A long time without the remote control, remove the battery.
4. When remote distance becomes smaller and insensitive, replace the battery.
5. If no response from the receiver, please re-match the remote.
6. Gently handle remote, beware of falling.
7. For indoor and dry location use only.