


In the Box:



Screws




Wall
Plugs



Wire &
Clamps




Clamp
Bolt

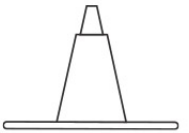


Ceiling
Mounts




Allen
Key

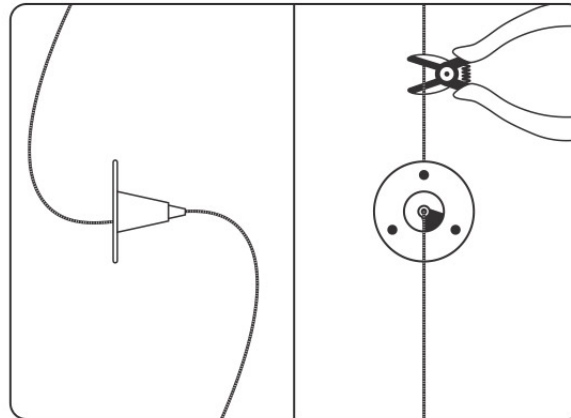


1 Pull wire through ceiling mount to adjust hanging height, then trim

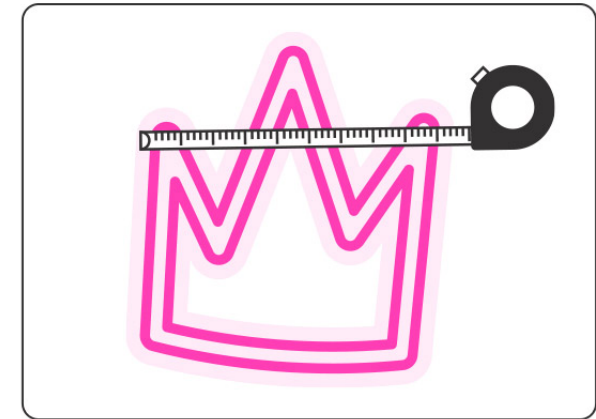


2 Measure distance between the holes in the backboard

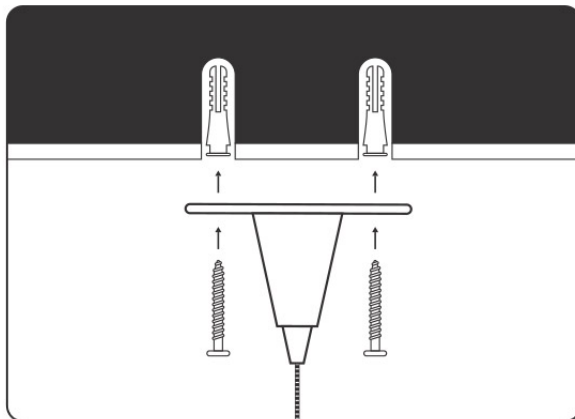

3 Use these measurements to screw the mounts into the ceiling

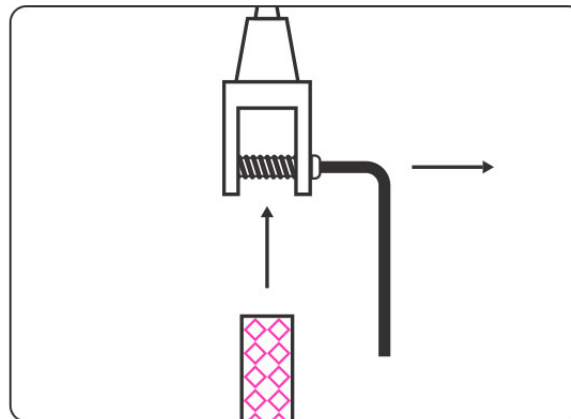

4 Unscrew the bolt from the clamp, insert acrylic backboard and align to hole

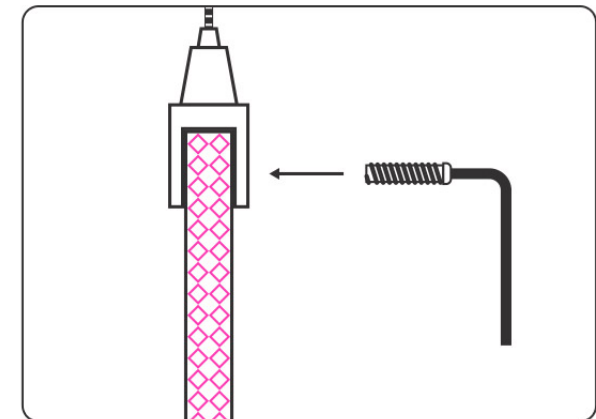

5 Thread bolt back into the clamp and tighten with allen key