
In the Box:









Spacer (A) Spacer (B)

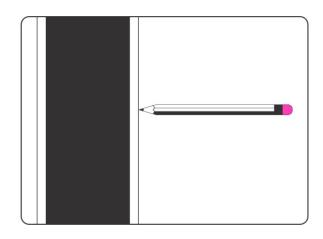


Using a pencil and your sign as a stencil, mark the drill holes

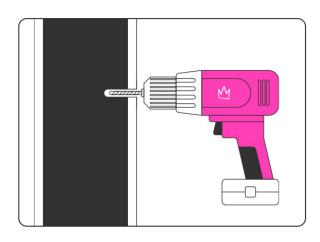


2 Drill 0.9cm into the marked holes on the wall

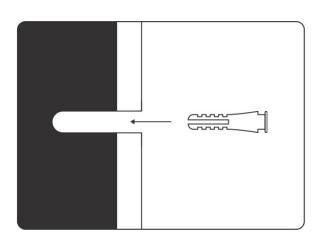

3 | Place wall plugs into the holes in the wall

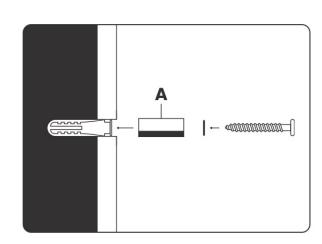

4 | Place wall screws into the spacers and drill into wall

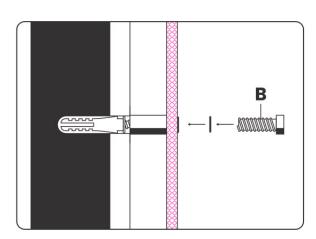

5 Position the sign, and tightly screw in the spacer screws

Aus: kingsofneon.com.au custom@kingsofneon.com.au

USA: kingsofneon.com custom@kingsofneon.com

UK: kingsofneon.uk custom@kingsofneon.uk